
Parts Must be Returned to You are Changed

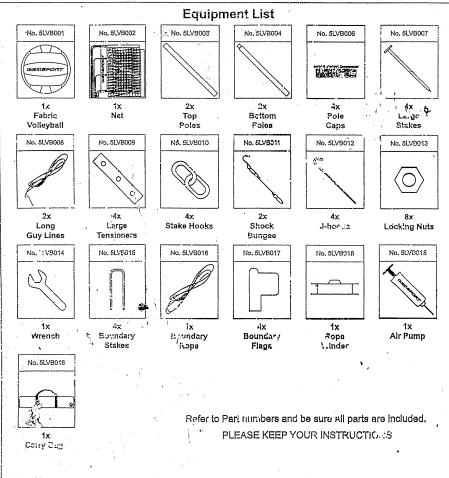


- ASSEMBLY

- 1. Find a clear area large enough for a volleyball court, 29" x 59".
- 2. Remove all items from the box and inspect to ensure all items are included.
- 3. Find both sets of poles Top Pole and Bottom Pole.
- 4. Place the pole caps on the top and bottom of the pole
- 5. Connect the poles together by placing the top pole into the bottom pole.
- 6. Find the 4 J-hooks and the 8 locking nuts.
- 7. Screw one nut onto each J-nook equal distance up the shaft making sure the i-hook will still travel the pole exposing enough of the bolt to allow the second nut to go on easily.



- 7. Slide the J-hook through the top hole (Men's playing height) of the top pole securing with the locking nut.
- 8. Turn the pole 180 degrees and slide a second J-hook through the lower hole (Women's playing height)and secure with a locking nut.
- 9. Repeat this step with the second set of poles.

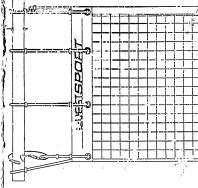

- 10. Lay the net out in the space you will set up the court.
- 11. Lay the poles next to the net and run the top line through the opening of the pole.
- 12. Tie the top rope to the jay hook.
- 13. The the next three ropes to the Pole with 5 inches of space between the net and the pole *
- 14. Loop the next rope and connect to the pole using the shock bungee.
- 15. The last rope can be tied or left alone.
- 15. Repeat this on the second pole. A
- 🖷7. Take hold of the long guy line stakes and place them in the ground at a 45 degree angle to the pole, not placing too much tension on the lines.
- 18. Repeat this step with the other pole, putting tension on the net.
- 19. Tighten all the tensioners to secure the poles and net.
- 20. Tighten the top line of the net making the top of the net tight.

